Fidji GU10

 
ArteLED

LED's LIGHT Range






- · No accepted return and loss of guarantee if opening of a poxer supply or a connector
- · No accepted return and loss of guarantee if the cable provided is cut
- Never not to work under tension



1. To make a hole Ø96 mm in the support (ceiling, wall, etc...). Attention, the hole must be clean, without bur.



3.To connect the luminary with the connectors

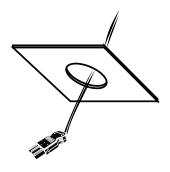

2. To put to a connector GST 18 Female on the electric cable 230 $\mbox{\ensuremath{V}}$



4. To install the lamp in the casing

